

SDM230 Series

Single Phase Two Wire Multifunction Din Rail Meter



User Manual V1.6

Warnings

Important Safety Information is contained in the Maintenance section. Familiarize yourself with this information before attempting installation or other procedures.

- Risk of Danger:** These instructions contain important safety information. Read them before starting installation or servicing of the equipment.
- Caution:** Risk of Electric Shock

1. Introduction

This document provides operating, maintenance and installation instructions of SDM230 series made by Easton Electronic Co., Ltd. The SDM230 series measure and display the characteristics of single phase two wire (1p2w) network. The SDM230 series covers 5 models: SDM230-Modbus, SDM230-Pulse, SDM230-Mbus, SDM230-2T and SDM230-Std.

The bi-directional measurement makes the meter suitable for import and export energy and power monitoring applications, and also perfect for solar PV measurements. With RS485 Modbus and M-bus port, the meter is easy to remote communicate with other AMR/SCADA systems.

Model	Measurements	Communication	Pulse Outputs	Multi Tariffs
SDM230-Modbus	U, I, P, Q, S, PF, Hz, Dmd, kWh, kVArh, Import, Export	RS485 Modbus	1: configurable 2: 1000imp/kwh	NO
SDM230-Mbus	U, I, P, Q, S, PF, Hz, Dmd, kWh, kVArh, Import, Export	M-bus EN13757-3	1: configurable 2: 1000imp/kwh	NO
SDM230-Pulse	U, I, P, Q, S, PF, Hz, Dmd, kWh, kVArh, Import, Export	NO	1: configurable 2: 1000imp/kwh	NO
SDM230-2T	U, I, P, Q, S, PF, Hz, Dmd, kWh, kVArh, Import, Export	RS485 Modbus	1: configurable 2: 1000imp/kwh	2 Tariffs (Dual source)
SDM230-Std	kWh, kVArh, Import, Export	RS485 Modbus	1: configurable 2: 1000imp/kwh	NO

1.1 Key Characteristics

- Bi-directional measure and display
- Multi-function measurements
- Two pulse outputs
- RS485 Modbus / M-bus
- 100A direct connection
- Two module size (35mm)
- Password protected set-up
- Backlighted LCD display
- 2 tariff dual power source

1.2 Pulse Output

The meter provides two pulse outputs. Both pulse outputs are passive type. Pulse output 1 can be set to generate pulses to represent total / import/export kWh or kVArh. The pulse constant can be set to generate 1 pulse per: 0.001/0.01/0.1/1kWh/kVArh (default is 0.001 export kWh). Pulse width: 200/100/60ms Pulse output 2 is non-configurable. It is fixed with active kWh (Imp). The constant is 1000imp/kWh.

1.3 RS485 Serial – Modbus RTU

Rs485 serial port with Modbus RTU protocol to provide a means of remotely monitoring and controlling the unit. Set-up screens are provided for setting up the RS485 port.

1.4 Mbus for SDM230-Mbus

This unit has an M-BUS serial port with M-BUS protocol to provide a means of remotely monitoring and controlling the unit set-up screens are provided for setting up the M-bus port.


1.5 Dual Source Measurement for SDM230-2T

This unit can measure energy from two different power supplies. For example, when public grid is power off and electric generator is on, the meter switches to tariff 2 measurement automatically.

The meter can also be used as a tariff meter. The tariff is controlled by an external time relay.

2. Operation

2.1 LCD Display

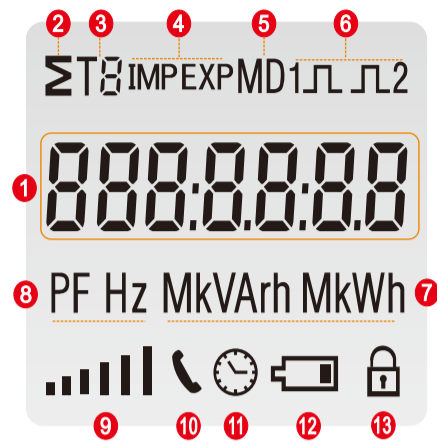

NO.	Descriptions
1	7 digits used to display measured values
2	Total value
3	Tariff information
4	Import information, Export information
5	Max. Demand for power or current.
6	Pulse output 1 and Pulse output 2
7	Measurement units
8	PF = power factor Hz = frequency
9	Bar display of power
10	Communication indicator
13	Lock symbol

2.2 Initialization Display

	All display segments light up, display check.
	Software Version (This information is for reference only, in kind prevail.)
	Modbus ID or Mbus Primary Address
	Mbus Secondary Address (High) (for SDM230-Mbus only)
	Mbus Secondary Address (Low) (for SDM230-Mbus only)
	Baud Rate.
	Total kWh.

2.3 Scroll Display by Buttons

After initialization and self-checking program, the meter display the measured values. The default page is total kWh. If the user wants to check other information, he needs to press the scroll button on the front panel.

The display order by scroll button :

*For SDM230-Modbus:

Total kWh→ Import kWh→Export kWh→ Resettable kWh→ Total kVArh→Import kVArh→ Export kVArh→Resettable kVArh→ Max. Power Demand→ Voltage →Current→W→ VAr →VA→ Power Factor→Frequency →Pulse Constant→ Modbus ID →Baud Rate →Continuous Running Time Display No:1,4-7,10-24.

*For SDM230-Pulse:

Total kWh→ Import kWh→Export kWh→ Resettable kWh→ total kVArh→Import kVArh→ Export kVArh→resettable kVArh→ Max. Power Demand→ Voltage →Current→W VAr →VA→ Power Factor→Frequency →Pulse Constant Display No:1,4-7,10-21.

*For SDM230-2T:

Total kWh→ T1 total kWh→ T2 total kWh→Import kWh→ Export kWh →resettable kWh→Total kVArh→T1 total kVArh→T2 total kVArh→Import kVArh→ Export kVArh→ resettable kVArh→Max. Power Demand→ Voltage → Current→W→ VAr →VA→Power Factor→ Frequency → Pulse Constant→ Modbus ID→Baud Rate→ Continuous Running Time Display No: 1~24.

*For SDM230-Mbus:

Total kWh→ Import kWh→Export kWh→ Resettable kWh→Total kVArh→Import kVArh→ Export kVArh→ Resettable kVArh→ Max. Power Demand→ Voltage → Current→W→ VAr →VA→Power Factor→ Frequency → Pulse Constant→ Mbus Primary Address→Mbus Secondary Address→ Baud Rate→Continuous Running Time Display No:1,4-7,10-24.

*For SDM230-Std:

Total kWh→ Import kWh→Export kWh→ Resettable kWh→Total kVArh→Import kVArh→ Export kVArh→ Resettable kVArh→ Pulse Constant→ Modbus ID→ Baud Rate → Continuous Running Time Display No:1,4-7,10-12, 21-24.

Scroll display by buttons:

No.	Display	Descriptions
1		Total active energy Example:70.00kWh
2		T1 active energy Example: 10.00kWh (for SDM230-2T only)
3		T2 active energy Example: 10.00kWh (for SDM230-2T only)
4		Import active energy Example: 50.00kWh
5		Export active energy Example: 20.00kWh
6		Resettable total active energy
7		Total reactive energy Example: 10.00kVArh
8		T1 reactive energy Example: 2.00kVArh (for SDM230-2T only)
9		T2 reactive energy Example: 2.00kVArh (for SDM230-2T only)
10		Import reactive energy Example: 5.00kVArh
11		Export reactive energy Example: 5.00kVArh
12		Resettable total reactive energy

13		Max. power demand Example: 6938W
14		Voltage Example: 229.8V
15		Current Example: 30.156A
16		Active power Example: 4700W
17		Reactive power Example: 1030VAr
18		Apparent power Example: 4811VA
19		Power factor Example: 1.000
20		Frequency Example: 49.99Hz
21		Pulse 2 constant Example: 1000
22		Modbus address Example: 001 Mbus primary address Example:001
22-1		High and low bit of MBUS Secondary address (Default: same as SN) Example: if the Secondary address high bit is 0000, low bit is 0001, the integral Secondary address is 00 00 00 01 (for SDM230-Mbus only)
23		Baud rate Example: 9600
24		Continuous running time (since last time reset)

2.4 Set-up Mode

To get into Set-up Mode, the user needs to press the "Enter" button for 3 seconds.

	The setting is done correctly
	The entering information is wrong. The operation fails.

1		<p>Password To get into Set-up mode, it asks a password confirmation. Default password: 1000</p>
2		<p>Address For Modbus: Default ID is 001 Range: 001~247 For Mbus: Primary address ID Default ID is 001 Range:001~250</p>
2-1		<p>Press the "Enter" button, the first digit flash. Press the "Scroll" button to change the value. After choosing the new address value, the user needs to press the "Enter" button to confirm the setting.</p>
2-2		<p>High bit of Mbus secondary address(Default 00 00) (for SDM230-Mbus only)</p>
		<p>Low bit of Mbus secondary address Example: if the secondary address high bit is 0000, low bit is 0001, the integral Secondary address is 00 00 00 01 (for SDM230-Mbus only)</p>
3		<p>Baud rate for Modbus Default value: 2400bps Range: 1200, 2400, 4800, 9600bps. Baud rate for Mbus: Default value: 2400bps Range:300, 600, 1200, 2400, 4800, 9600bps.</p>
3-1		<p>Press the "Enter" button, the red part flash. Press the "Scroll" button to change the value. After choosing the new baud rate, the user needs to press the "Enter" button to confirm the setting.</p>
4		<p>Parity Default: None Option : None, Even, Odd</p>
4-1		<p>Press the "Enter" button, the red part flash. Press the "Scroll" button to change the option. After choosing the new parity, the user needs to press the "Enter" button to confirm the setting.</p>
5		<p>Pulse output 1 Default: Exp kWh Option:kWh / KVAh / Imp. kWh / Exp.kWh / Imp.kVAh / Exp.kVAh</p>
5-1		<p>Press the "Enter" button, the red part flash. Press the "Scroll" button to change the option. After choosing the new pulse output option, the user needs to press the "Enter" button to confirm the setting.</p>
6		<p>Pulse constant Default: 1000 Option: 1000 / 100 / 10 / 1</p>
6-1		<p>Press the "Enter" button, the red part flash. Press the "Scroll" button to change the option. After choosing the new pulse constant option, the user needs to press the "Enter" button to confirm the setting.</p>
7		<p>Pulse duration Default: 100mS Option: 200 / 100 / 60mS</p>
7-1		<p>Press the "Enter" button, the red part flash. Press the "Scroll" button to change the option. After choosing the new pulse duration option, the user needs to press the "Enter" button to confirm the setting.</p>
8		<p>Demand integration time Default: 15 min Option: off(0) / 5 / 10 / 15 / 30 / 60</p>
8-1		<p>Press the "Enter" button, the red part flash. Press the "Scroll" button to change the option. After choosing the new DIT option, the user needs to press the "Enter" button to confirm the setting.</p>

9		<p>Automatic scroll time interval Default: 0 S Option: 0 ~ 30S</p>
9-1		<p>Press the "Enter" button, the red part flash. Press the "Scroll" button to change the option. After choosing the new "ScrL" option, the user needs to press the "Enter" button to confirm the setting.</p>
10		<p>Backlit lasting time Default: 60 min Option: 0(off)/ 5/ 10/ 20/ 30/ 60 Long press "Enter" button to enter set-up mode.</p>
10-1		<p>Press the "Enter" button, the red part flash. Press the "Scroll" button to change the option. After choosing the new "ScrL" option, the user needs to press the "Enter" button to confirm the setting.</p>
11		<p>Clear Long press "Enter" button to enter the clear interface.</p>
11-1		<p>Clear Max. demand of active power Long press the "Enter" button to confirm the operation.</p>
12		<p>Clear the resettable energy Long press the "Enter" button to confirm the operation.</p>
13		<p>Password Default: 1000</p>
13-1		<p>Press the "Enter" button, the red part flash. Press the "Scroll" button to change the option. After choosing the new "ScrL" option, the user needs to press the "Enter" button to confirm the setting.</p>

3. Specifications

3.1 General Specifications

Voltage AC (Un)	230V
Voltage range	176~276V AC
Base current (Ib/Iref)	10A
Max. current (Imax)	100A
Mini current (Imin)	0.5A
Starting current	0.4% of Ib/Iref
Power consumption	<2W/10VA
Frequency	50/60Hz ± 2% (for non-MID version)
AC voltage withstand	4KV for 1 min
Impulse voltage withstand	6KV-1.2uS waveform
Over current withstand	30Imax for 0.01s
Pulse 1 output rate	configurable, default 1000i/kWh
Pulse 2 output rate	non-configurable, 1000i/kWh
Display	LCD with backlit
Max. reading	999999.9kWh

3.2 Accuracy

Voltage	0.5% of range maximum
Current	0.5% of nominal
Frequency	0.2% of mid-frequency
Active power	1% of range maximum
Reactive power	1% of range maximum
Apparent power	1% of range maximum
Active energy	Class 1 IEC62053-21 Class B EN50470-1/3 Class 2 IEC62053-23
Reactive energy	


3.3 Environment

Operating temperature	-25°C to +55°C
Storage/transportation temperature	-40°C to +70°C
Reference temperature	23°C ± 2°C
Relative humidity	0 to 95%, non-condensing
Installation category	CAT II
Mechanical environment	M1
Electromagnetic environment	E2
Degree of pollution	2

*Maximum operating and storage temperatures are in the context of typical daily and seasonal variation.

3.4 Pulse Output

The pulse output 1 can be set to generate pulses to represent total kWh, total kVAh, import kWh, export kWh, import kVAh, export kVAh.
Constant can be set to 1000/100/10/1 impulse per kWh or kVAh.
Pulse width 200/100/60mS.



ATTENTION: Pulse output must be fed as shown in the wiring diagram on the left. Scrupulously respect polarities and the connection mode. Opto-coupler with potential-free SPST-NO Contact.

Contact range:5~27VDC
Max. current Input:27mA DC.

3.5 RS485 Output for Modbus RTU

*Not for SDM230-Pulse or SDM230-Mbus

The meter provides a RS485 port for remote communication. Modbus RTU is the protocol applied. For Modbus RTU, the following RS485 communication parameters can be configured from the set-up menu.
Baud rate: 1200, 2400, 4800, 9600 bps
Parity: NONE/ODD/EVEN
Stop bits: 1 or 2
Modbus Address: 1 to 247

3.6 Mbus


*For SDM230-Mbus only

The meter provides a Mbus Port for remote communication. the meter adopts EN13757-3 Mbus communication protocol. The communication parameters can be configured via the set-up mode.
Baudrate: 300, 600, 1200, 2400, 4800, 9600 bps
Parity: NONE/ODD/EVEN
Stop bits: 1 or 2
Primary address: 001~250
Secondary address: 00000001~99999999


3.7 Mechanics

Din rail dimensions	36x100x63 (WxHxD) Per DIN 43880
Mounting	DIN rail 35mm
Ingress protection	IP51 (indoor)
Material	Self-extinguishing UL94V-0

4. Dimensions

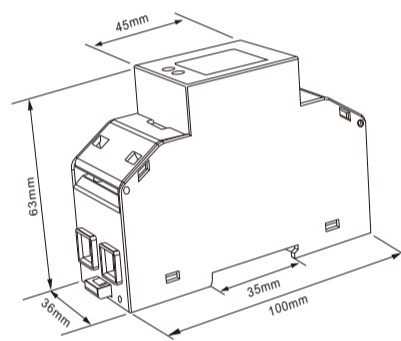


5. Installation and Sealing

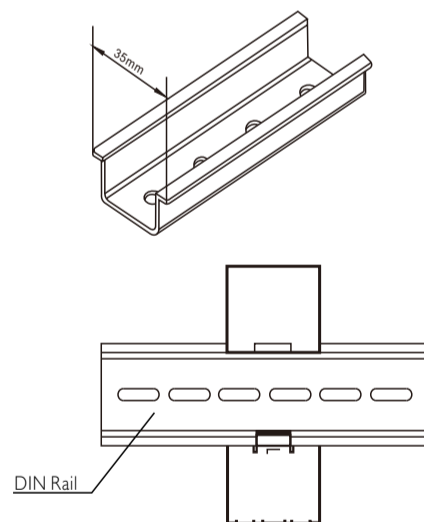


6. Wiring Diagram

6.1 SDM230-V1

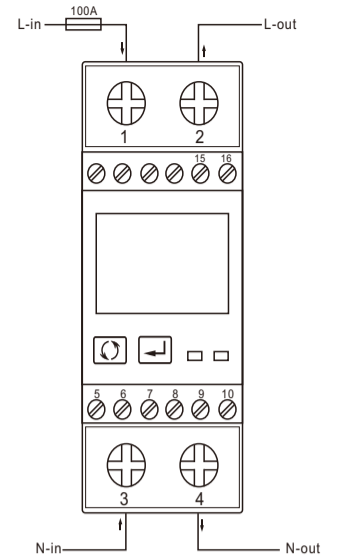


6.2 SDM230-V2

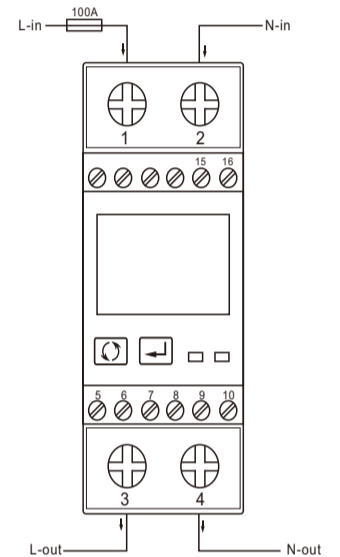


6.3 Definitions of other terminals


SDM230-2T




SDM230-Modbus/Std



SDM230-Mbus



SDM230-Pulse



Terminals Capacity	COMM / Pulse / 2T	0.5~1.5mm ²
	Load	4~16mm ²
Screw Torque	COMM / Pulse / 2T	0.4Nm
	Load	3Nm

Declaration of Conformity(for the MID approved version meter only)

We Zhejiang Eastron Electronic Co.,Ltd.
Declare under our sole responsibility as the manufacturer that the single phase multi-funtion electrical energy meter "SDM230 Series" correspond to the production model described in the EU-type examination certificate and to the requirements of the Directive 2014/32/EU EU type examination certificate number 0120/SGS0206. Identification number of the NB0120

Zhejiang Eastron Electronic Co.,Ltd.
Add: No.1369, Chengnan Rd. Jiaxing,
Zhejiang, China
Tel: 86 573 83698881
Fax: 86 573 83698883
Email: sales@eastrongroup.com
Web: www.eastrongroup.com

